 


PRODUCT DRAWING & INDICATION

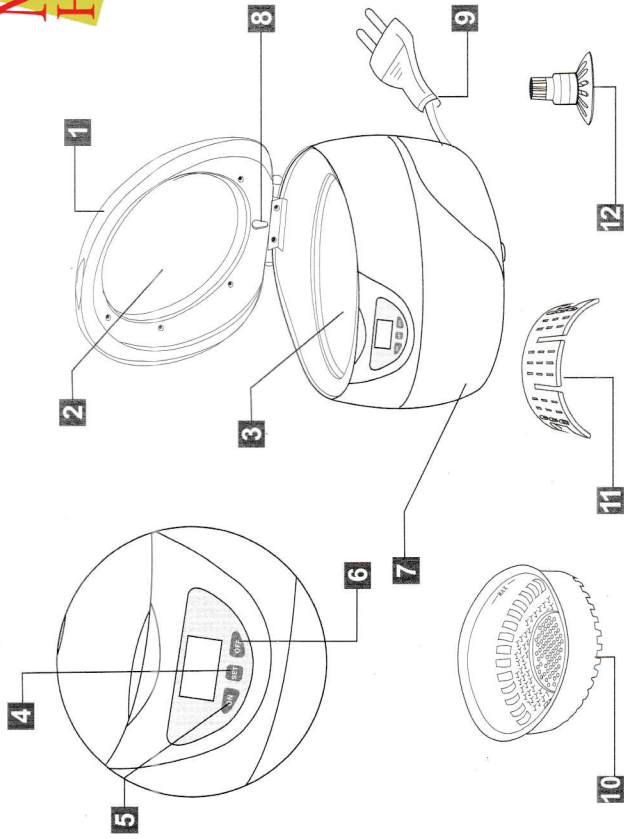


- 1** LID **2** VIEW WINDOW **3** STAINLESS STEEL TANK **4** SET BUTTON
- 5** ON BUTTON **6** OFF BUTTON **7** HOUSING **8** LED **9** PLUG AND CORD
- 10** PLASTIC BASKET **11** PLASTIC WATCH STAND **12** CD RACK

SPECIFICATIONS:


NAME	DIGITAL ULTRASONIC CLEANER	POWER SUPPLY	AC 220-240V 50Hz; 50 W AC 100-120V 60Hz; 35 W AC 100V 50/60Hz; 26 W
ITEM NUMBER	CD-7820 (A)	TIMER SETTING	5 CYCLES: 180s., 280s., 380s., 480s., 90s
DIMENSIONS	207X174X140mm	WEIGHT	1.10 kg
TANK SIZE (MAX)	550ml		

IMPORTANT SAFETY INSTRUCTIONS

 
⚠ WARNING-To reduce the risk of burn or injury to persons

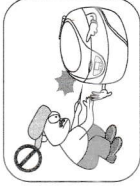

 
Do not disassemble the unit except for the authorized technician.

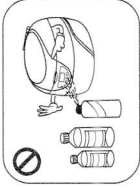

 
Do not fill the tank with abrasives or corrosive chemicals.

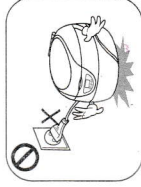

 Unplug the unit before filling. Do not exceed the "MAX" mark.

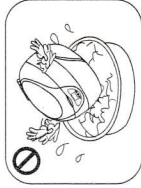

 
Do not immerse the unit into water to avoid electric shock.

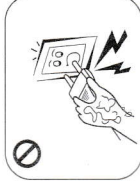


Do not touch the socket with wet hand to avoid electric shock.



 Do not use this unit when sleeping or drowsy.

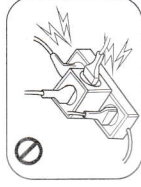

 Use the unit properly as per its instruction manual. Do not use attachments not recommended by the manufacturer.

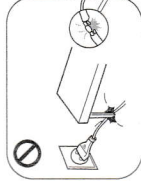

Never operate this unit if cord or plug is damaged. If it is not working properly, damaged or has been dropped into water, return the damaged unit to a service center for examination and repair.



Any uniform inlaid item may become loose. Items that are easy to be discolored are not recommended for ultrasonic cleaning. For example: textiles, leather products, woodware, etc.

Do not put mobile phone or watch which is not waterproof into the tank for cleaning. Do not put any spectacle frame or art ware which is made from shell or hawkshell into the tank for cleaning.

Don't use the product if there isn't water in the cleaning tank.